

HelloDevice UniversalComm

1.0.0

2003-09-25

1.	3
2.	4
3.	5
3.1	5
3.2 TCP Server	6
3.3 TCP Client	6
3.4 UDP Server	7
3.5 UDP Client	7
3.6 UDP	7
3.7 RS-232	8
4.	8
4.1	8
4.2	9
5.	11
5.1.	11
5.2.	12
5.3.	13
5.3.1. TCP	13
5.3.2. RS232	13

1.


HelloDevice UniversalComm TCP/UDP/

HelloDevice

O/S :

98/ME/NT/2000/XP


- (Server Setting)
- (Received Data)
- (Sending Data)

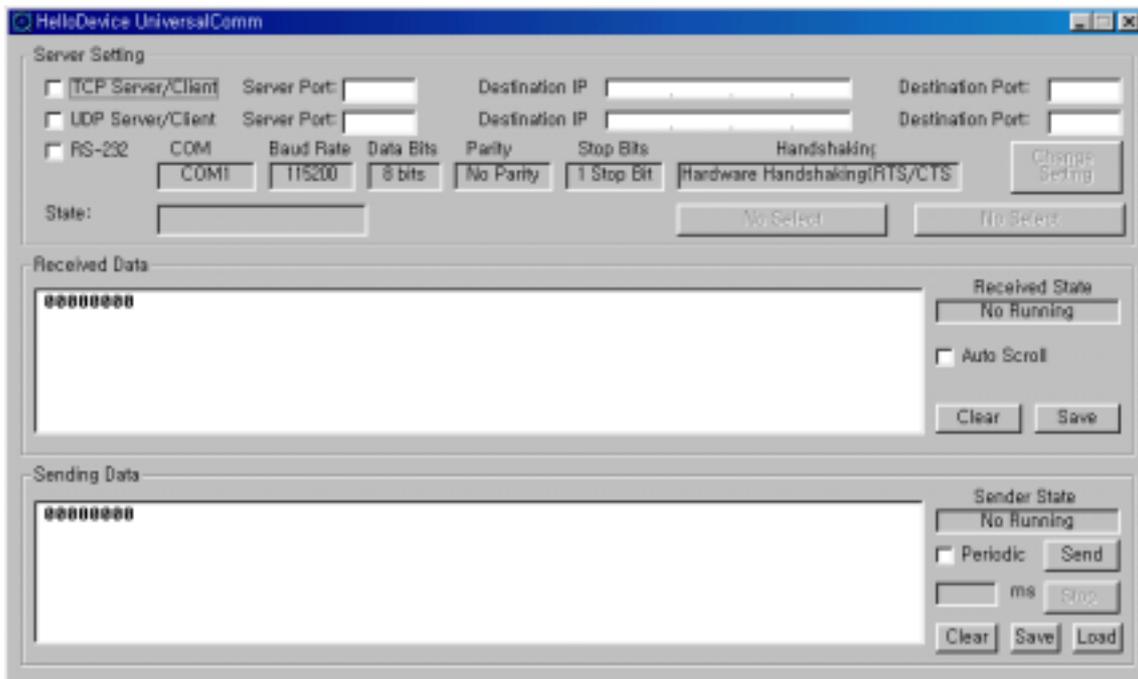

2.

1) Setup_HDUiversalComm_1.0.0.exe

2)

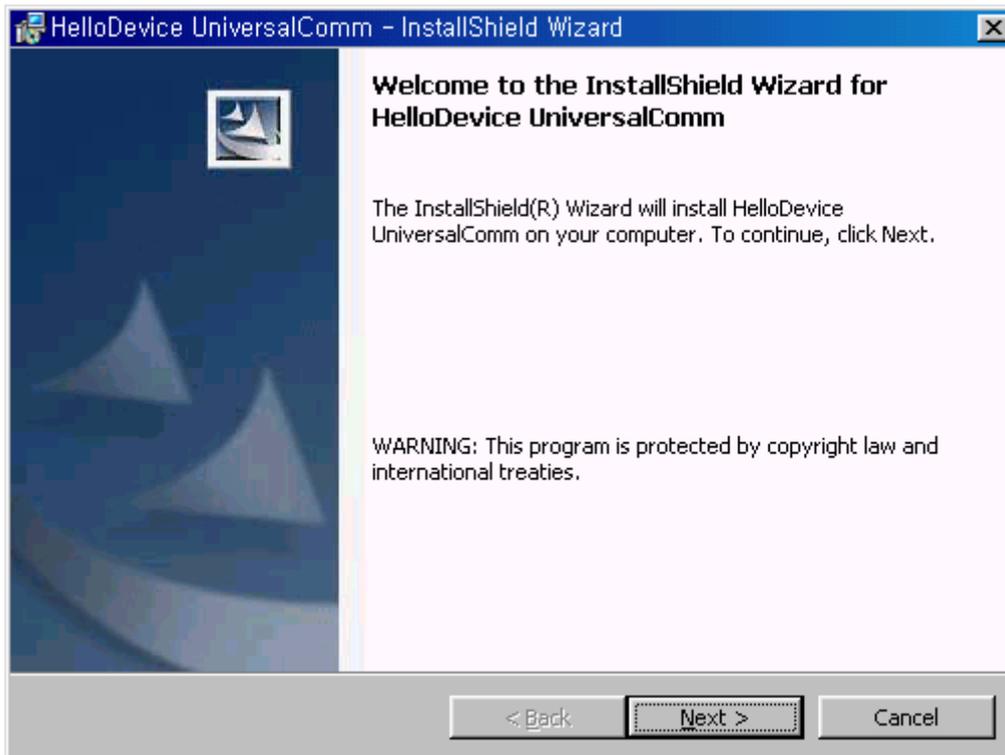

3) 가 ,

-

C:\Program Files\sena\HelloDevice UniversalComm

-

UniversalComm 가

4)

UDP


[Bind] [Stop Bind]

RS232

[Open] [Close]

3.2 TCP Server

- 1) Server Port Listening Port , TCP Server/Client Enable .

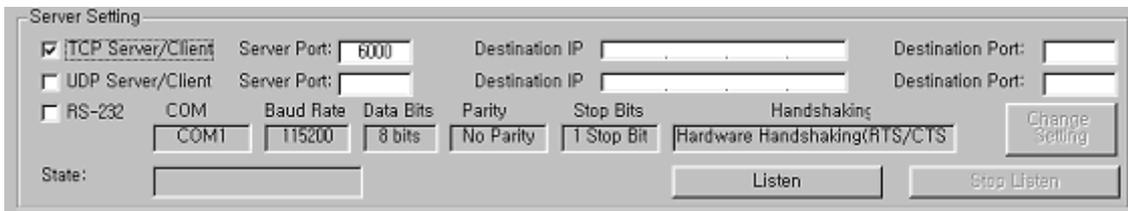


- 2) [Listen] TCP Server .

3.3 TCP Client

- 1) IP TCP Port Destination IP Destination Port , TCP Server/Client Enable .



- 2) [Connect] , TCP Client .

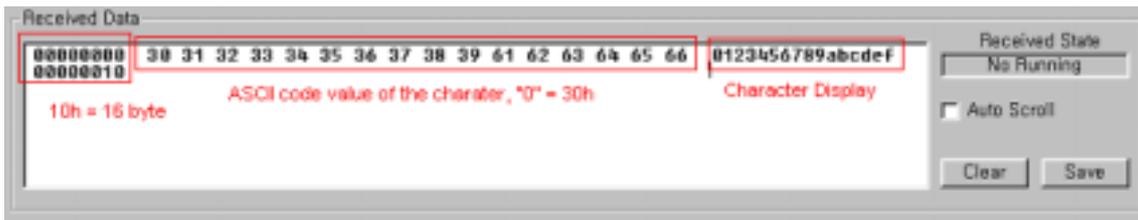


, "0123456789abcdef"

- 1) [Save]
Received Data
- 2) [Clear]
Received Data
- 3) [Auto Scroll]
Enable , 가 , 가

4.2

Sending Data , , TCP/UDP , ASCII

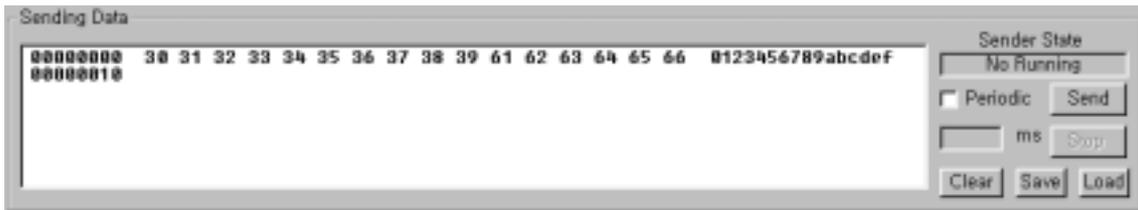

- 1) [Load]
- 2) [Save]
가
- 3) [Clear]
가


4) [Send]
가

5) Periodic
Enable , [ms]
, [Send] , Sending Data 가

6) [Stop]

5.

UniversalComm PC HelloDevice TCP/IP-RS-232
 . UniversalComm HelloDevice TCP
 UniversalComm HelloDevice RS-232 HelloDevice
 UniversalComm

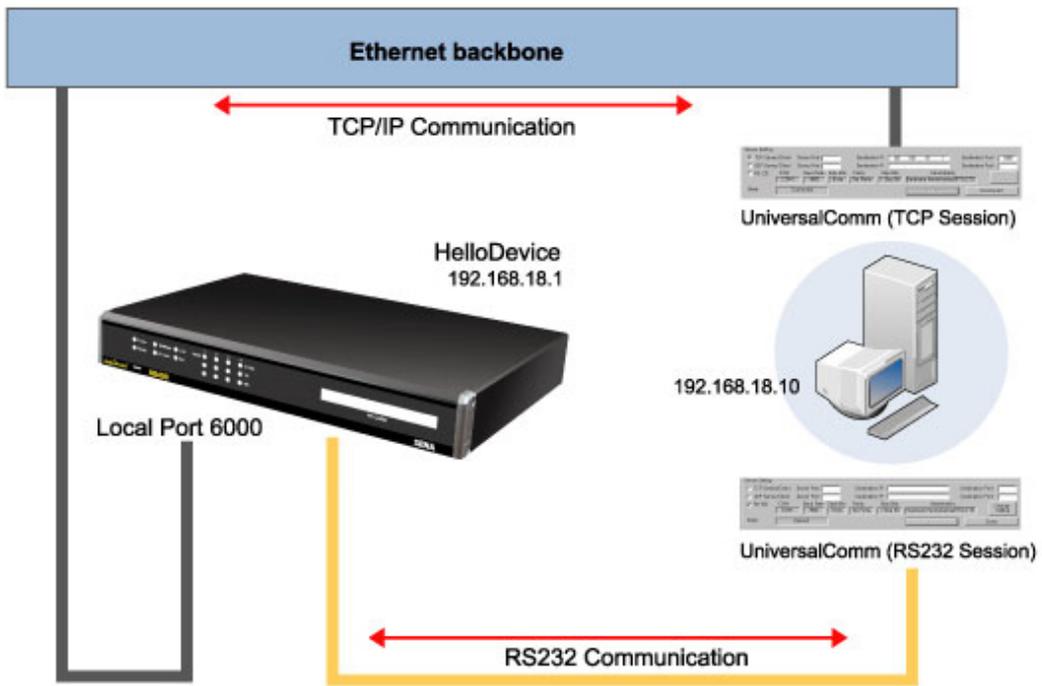

5.1.

- 가 HelloDevice: 1320E, LS100, PS100/200/400, SS100/110/400/800
- RS232
- PC
- HelloDevice UniversalComm


1) PC COM1 HelloDevice RS232

2) HelloDevice , PC

가


5.2.

- PC IP : 192.168.18.10
- HelloDevice
 - IP : 192.168.18.1.
 - :
1320, LS100, PS100/200/400, SS100: TCP Server (Local port : 6000)
SS110/400/800: TCP , Listening port 6000
 - : 9600 , 8, N, 1 , H/W
- UniversalComm
 - TCP Client
 - 1) HelloDevice UniversalComm ,
 - 2) Destination IP Destination port , Session

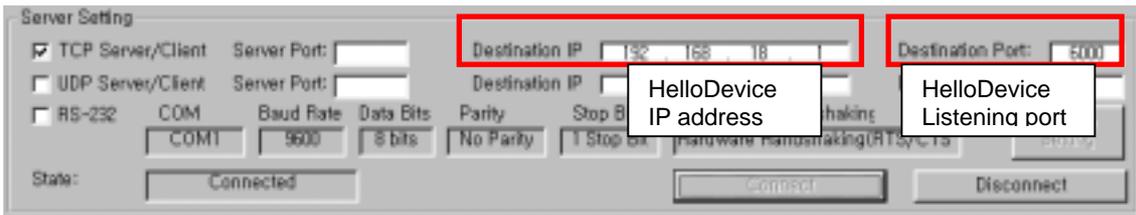

- 3) [Connect] HelloDevice PC TCP session

- RS-232
 - 1) HelloDevice UniversalComm ,
 - 2) [Change Setting] PC RS232 HelloDevice

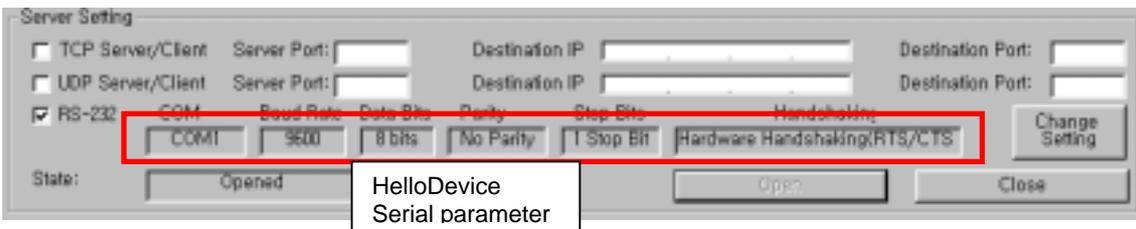

- 3) [Open] HelloDevice PC RS-232

