

Quick Start Guide

PS110

HelloDevice Pro Series



SENA



Set DIP Switch & Pin-outs




Set serial DIP switch according to your serial device requirements(RS-232/422/485)

DIP Switch Setting		ON 1 2 3 RS-232 Mode	ON 1 2 3 RS-422/485 Full Mode	ON 1 2 3 RS-485 Half Mode
1 2 3 4 5 6 7 8 9		RS232 (console and serial ports)	RS422 (serial ports only)	RS485 (serial ports only)
DB-9 Pinouts	1	DCD	Tx+	Tx+
	2	Rx	RX+	RX+
	3	Tx	RTS+	-
	4	DTR	CTS+	-
	5	GND	GND	GND
	6	DSR	TX-	TX-
	7	RTS	RTS-	-
	8	CTS	RX-	RX-
	9	-	CTS-	-

* Please note that the power of the Pro Series should be turned off before changing the serial communication type.

Connection

① Connect serial device

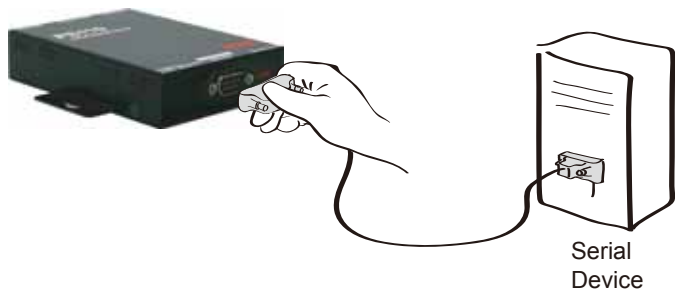

② Connect Ethernet cable



③ Connect Power supply



Configuration

User can choose one of the following processes

Default Log-in ID/Password is root/root.

1. Configuration using the HelloDevice manager



3. Configuration using the Web



2. Configuration using the Hyper terminal or Telnet

Connect to host PC. Then, slide Data/Console switch to the Console side.

Set up the serial configuration parameters of the terminal emulation program as follows:

9600 Baud rate/8 Data bits/None Parity/1 Stop bits/
No Hardware flow control

After login, "editconf" command will allow you to get into the text-menu driven interface. Then menu screen is displayed.



HelloDevice Manager and User Manual are available for download from Sena website at <http://www.senaindustrial.co.kr/support/downloads/>.

For more information, refer to the user manual.

Visit us at www.senaindustrial.co.kr

Copyright 1998-2012, Sena Technologies, Inc. All rights reserved.

Quick Start Guide

PS410

HelloDevice Pro Series



SENA



Set DIP Switch & Pin-outs



Set serial DIP switch according to your serial device requirements(RS-232/422/485)

DIP Switch Setting	ON	ON	ON
	1 2 3	1 2 3	1 2 3
	RS-232 Mode	RS-422/485 Full Mode	RS-485 Half Mode
DB-9 Pinouts	RS232 (console and serial ports)	RS422 (serial ports only)	RS485 (serial ports only)
1	DCD	Tx+	Tx+
2	Rx	RX+	RX+
3	Tx	RTS+	-
4	DTR	CTS+	-
5	GND	GND	GND
6	DSR	TX-	TX-
7	RTS	RTS-	-
8	CTS	RX-	RX-
9	-	CTS-	-

* Please note that the power of the Pro Series should be turned off before changing the serial communication type.

Connection

① Connect serial device

② Connect Ethernet cable

③ Connect Power supply



Configuration

User can choose one of the following processes

Default Log-in ID/Password is root/root.

1. Configuration using the HelloDevice manager
2. Configuration using the Hyper terminal or Telnet
3. Configuration using the Web



HelloDevice Manager and User Manual are available for download from Sena website at <http://www.senaindustrial.co.kr/support/downloads/>.

For more information, refer to the user manual.

2. Configuration using the Hyper terminal or Telnet

Connect the host PC and PS410's console port using a serial console cable.

Set up the serial configuration parameters of the terminal emulation program as follows:
9600 Baud rate/8 Data bits/None Parity/1 Stop bits/
No Hardware flow control

After login, "editconf" command will allow you to get into the text-menu driven interface. Then menu screen is displayed.

Visit us at www.senaindustrial.co.kr

Copyright 1998-2012, Sena Technologies, Inc. All rights reserved.

Quick Start Guide

PS810

 
HelloDevice Pro Series



SENA




Pin-outs

 1 2 3 4 5 6 7 8 9	RS232 (console and serial ports)	RS422 (serial ports only)	RS485 (serial ports only)	
DB-9 Pinouts	1	DCD	Tx+	Tx+
	2	Rx	RX+	RX+
	3	Tx	RTS+	-
	4	DTR	CTS+	-
	5	GND	GND	GND
	6	DSR	TX-	TX-
	7	RTS	RTS-	-
	8	CTS	RX	RX-
	9	-	CTS-	-


* User can change the serial communication type using software such as hyper terminal, telnet or web management interface.

Connection

① Connect serial device

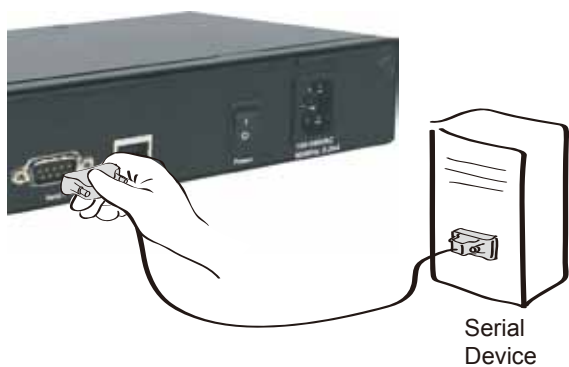

② Connect Ethernet cable

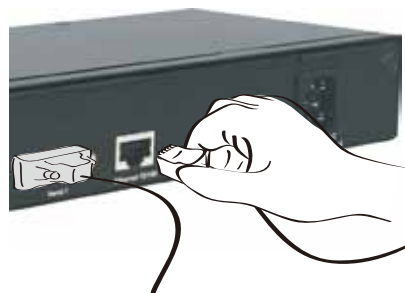

③ Connect Power cord




Configuration

User can choose one of the following processes

Default Log-in ID/Password is root/root.

1. Configuration using the HelloDevice manager

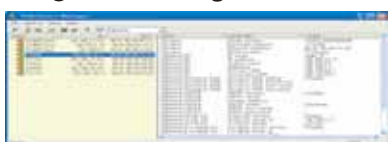

3. Configuration using the Web



2. Configuration using the Hyper terminal or Telnet



Connect the host PC and PS810's console port using a serial console cable.

Set up the serial configuration parameters of the terminal emulation program as follows:
 9600 Baud rate/8 Data bits/None Parity/1 Stop bits/
 No Hardware flow control

After login, "editconf" command will allow you to get into the text-menu driven interface. Then menu screen is displayed.

HelloDevice Manager and User Manual are available for download from Sena website at <http://www.senaindustrial.co.kr/support/downloads/>.

For more information, refer to the user manual.

Visit us at www.senaindustrial.co.kr

Copyright 1998-2012, Sena Technologies, Inc. All rights reserved.